



Rebate Sets Fitting Instructions

Installing Fitting Rebate Sets - BS Fortress, Viscount, Euroshield, and 3 Lever (Suitable for doors of 42mm)

To fit a Fitting Rebate Set you will require the following tools:


- Chisel
- Pencil
- Screwdriver

- A** Select position of lock of door and chisel the mortice and rebate. Place face plate over the lock. Insert the lock into the door using the nylon packing pieces to bring it flush with the door edge.


Ensure packing pieces are in line with the holes in the face plate and secure the lock with screws provided.

Please Note: No nylon packing pieces required with the 2 Lever Rebated Sashlock or the 2/3 Lever Rebate Kits

- B** On the opposite door select the position for the box striker rebate and secure with the screws provided.

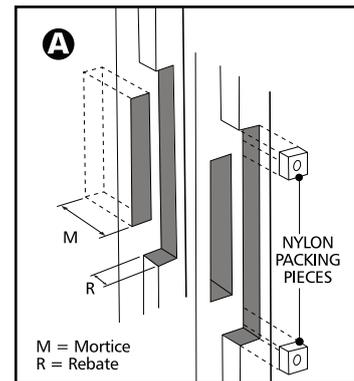

Left-handed Door

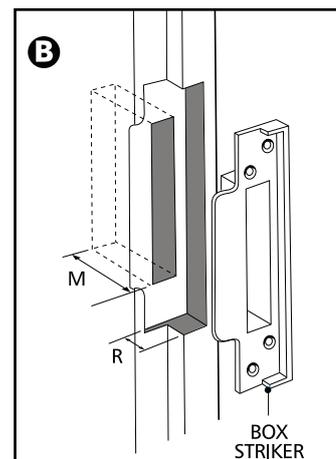

Right-handed Door

