

**Drilling template for BLUMOTION/TIP-ON**



Symbolic image

- Template for drilling the side fixing positions for BLUMOTION for doors handle side (970.1002) and hinge side (970A1002) as well as for TIP-ON for doors (956x1004)
- Assembly on a marking line
- Material: nylon/steel

**Assembly possibilities**

- AVENTOS HK**
- AVENTOS HK-S**
- AVENTOS HK-XS**
- CLIP top**

**Page instructions**

Overview – templates	734
Overview – assembly possibilities	736

**Application video**




**Order information**

	Description	Part no.
	Drilling template for BLUMOTION/TIP-ON	65.5010
<b>Composed of:</b>		
-	1 x Drilling template for BLUMOTION/TIP-ON	
-	1 x Drilling depth spacer Ø 10 mm	

**Assembly possibilities**


**AVENTOS HK/AVENTOS HK-S/AVENTOS HK-XS/CLIP top**

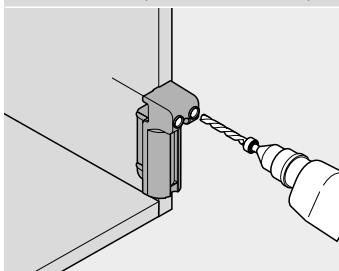

**TIP-ON assembly**

- Position template on marking line
- Distance from cabinet inner side to centre drilling 7.5 mm
- Perform drilling for TIP-ON (Ø 10 mm)

**CLIP top**

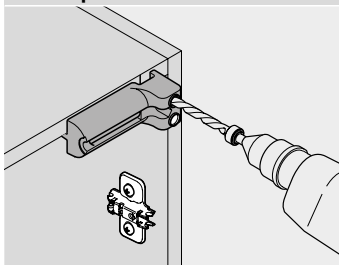

**BLUMOTION assembly**

- Position template on marking line
- Distance from cabinet inner side to centre drilling 7.5 mm
- Perform drilling for BLUMOTION (Ø 10 mm)